

ITM. / ART. 3234400

GOURMIA®



USER MANUAL

FRENCH DOOR **XL** DIGITAL AIR FRYER OVEN
GTF7660

TABLE OF CONTENTS

Congratulations	3
Important Safeguards	5
Know Your Air Fryer Oven	8
· Accessories	8
· Display & Control Panel	9
Using Your Air Fryer Oven	10
· Before First Use	10
· Set Up Your Air Fryer Oven	10
· Using Your Air Fryer Oven	11
· Stop / Cancel Cooking	11
Preset Chart	12
Using The Popcorn Preset	17
Cooking Tips	18
Cleaning & Maintenance	19
Warranty & Service	20



Congratulations on the purchase of your *Digital Air Fryer Oven* from Gourmia!

Here at Gourmia, our one and only goal is to make sure nutritious and delicious meals are always a practical possibility no matter how fast-paced your life is. Whether you're in need of a hearty breakfast, a mid-day snack, or a satisfying supper, our dependable, easy-to-use appliances are designed to work for you while you work your way through your busy day.

This manual provides an overview and instructions on all the air fryer oven's functions and features, along with directions for assembling, operating, cleaning, and maintaining your appliance. Please read all safety instructions before getting started. Keep this manual handy for future use and review.

Our team is available to help with any and every question you might have about your new air fryer oven. We're excited for you and want you to get the most out of your purchase—so whether you need assistance with setup or guidance on which features to enable for which foods, we're happy to walk you through it, step by step.

Happy and easy cooking!

We'd love to hear about the mouthwatering meals you're creating with your new air fryer oven! Share your thoughts, recipes, and photos with us.

@gourmia



IMPORTANT READ CAREFULLY RETAIN FOR FUTURE REFERENCE

FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
VISIT WWW.GOURMIA.COM
EMAIL INFO@GOURMIA.COM
OR CALL 888.552.0033
MON-THU 9:00AM TO 6:00PM ET
AND FRI 9:00AM TO 3:00PM ET
LANGUAGES SUPPORTED: ENGLISH, SPANISH, FRENCH

Model: GTF7660

© 2023 Gourmia

1.2

www.gourmia.com

The Steelstone Group

Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestions in this manual.

IMPORTANT SAFEGUARDS

CORD AND PLUG SAFETY

- A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use.
- If an extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance; and
 - b. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

ELECTRICAL POLARIZED PLUG

This unit has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to be used by inserting it into the electrical outlet only one way. If the plug does not fit securely into the outlet, reverse the plug and re-insert. If it still does not fit, contact a qualified electrician for assistance. Do not modify the plug in any way.



Power:	AC120V~ 60Hz 1700W
--------	--------------------

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Read all instructions before using this electric appliance. The following basic precautions should always be followed:

1. This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have supervision.
2. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they **do not** play with the appliance. Cleaning and user maintenance should not be done by children unless they are older than 8 and supervised.
3. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
4. **Always** ensure the appliance is fully assembled before plugging it into a wall outlet and turning it on.
5. **Do not** use the appliance if the plug, main cord, or appliance itself is damaged or has malfunctioned. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. **Never** connect this appliance to an external remote-control system or timer to avoid a hazardous situation.
7. **Do not** use an outlet below the countertop's surface. The cord should always be behind and away from the appliance.
8. **Do not** let the cord hang over the edge of the counter or table, nor let it touch hot surfaces.
9. **Do not** plug in the appliance or operate the controls with wet hands.
10. **Always** ensure the plug is inserted into the outlet properly.
11. **Do not** leave the appliance unattended when plugged in.
12. Place the appliance on a stable, level, and heat-resistant surface. Ensure that the area is clean and dry. **NEVER place the appliance on or near gas or electric burners and ovens even if the burner or oven is turned off.**
13. **Do not** place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides, and 4 inches of free space above the appliance.
14. **Do not** place anything on top of the appliance when in use.
15. A fire may occur if the air fryer oven is covered or touching flammable material, including curtains, draperies, tablecloths, walls, and the like, when in operation. **Do not** place the air fryer oven on or near combustible materials.

16. **Do not** cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
17. **Do not** use the appliance for any other purpose than described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
18. **Do not** place any of the following materials in the oven: paper (other than parchment paper), cardboard, plastic, and the like. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Oversized foods or metal utensils must not be inserted into the toaster oven, as they may create a fire or risk of electric shock.
20. During cooking, hot steam is released through the air vents. Keep your hands and face at a safe distance from the steam and from the air vents. Be careful of hot steam when you open the doors of the appliance.
21. **Do not** touch hot surfaces. Use handles and protective equipment to avoid burns. Use extreme caution when removing accessories or disposing of hot grease.
22. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
23. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
24. Immediately unplug the appliance if you see dark smoke coming from the appliance.
25. After using the appliance, avoid contact with the hot metal inside.
26. **Always** attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
27. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before cleaning.
28. To protect against electric shock, **do not** immerse the cord, plug, or appliance in water or other liquid.
29. **Do not** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
30. **Do not** store any materials other than manufacturer's recommended accessories in this oven when not in use.
31. **Do not** use outdoors.
32. **Do not** use in moving vehicles or boats.
33. For household use only.

SAVE THESE INSTRUCTIONS

 
KNOW YOUR AIR FRYER OVEN



Rack Positions

Control Panel

ACCESSORIES

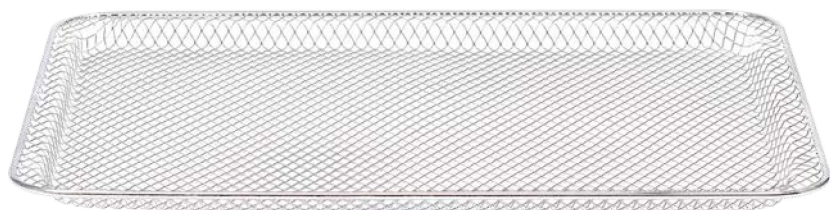

Air Fry Basket



Oven Rack



Baking Pan

 


Crumb Tray

NOTE: Always ensure the *crumb tray* is in the bottom of the air fryer oven during cooking.

KNOW YOUR AIR FRYER OVEN

DISPLAY AND CONTROL PANEL

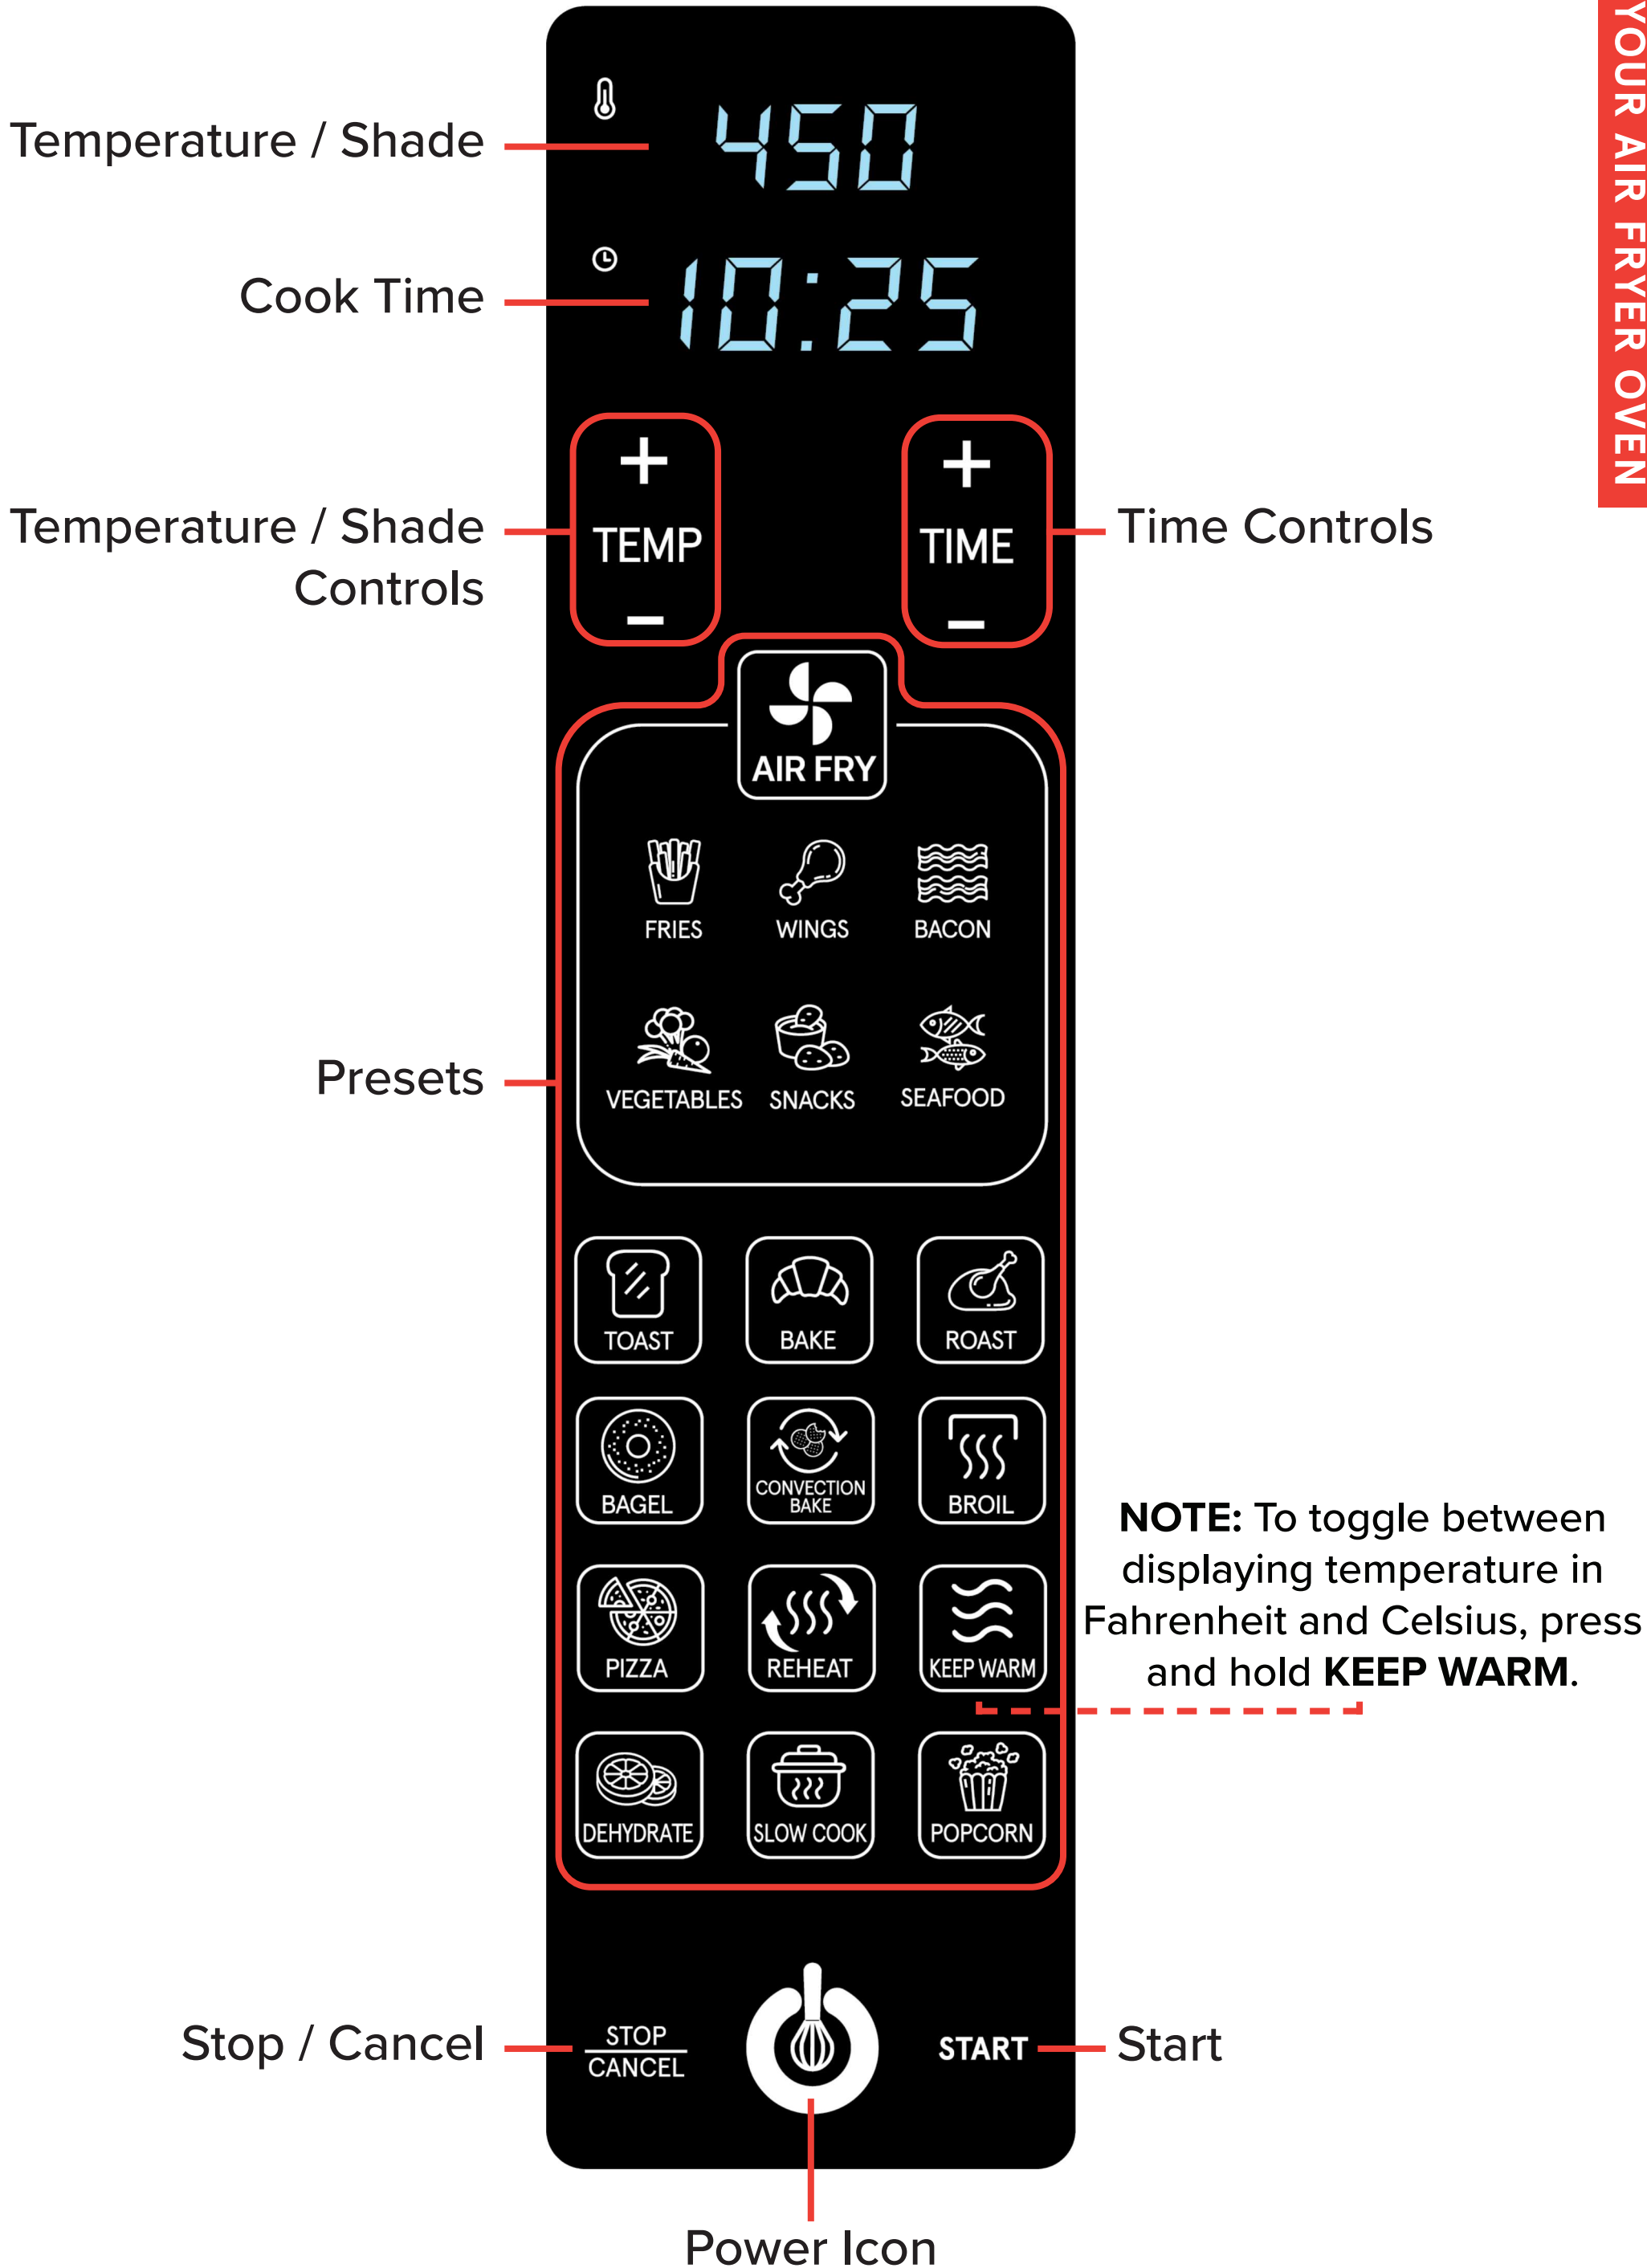

BEFORE FIRST USE

1. Remove and discard all packaging material, labels, and tape from the unit.
2. Thoroughly clean *air fry basket*, *oven rack*, *baking pan*, and *crumb tray* with hot water, dishwashing liquid, and a non-abrasive sponge. Dry all parts before use.
3. Wipe the inside and outside of the unit with a moist cloth.

WARNING:

Do not place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides, and 4 inches of free space above the appliance.


Do not place anything on top of the appliance when in use.

Always use **CAUTION** when opening the doors; hot steam may escape!

The oven, accessories and food will be hot! Do not touch hot surfaces. Use oven mitts when inserting or removing food from the oven.

NOTE: When spraying food for a crispier finish, we recommend using regular cooking oil instead of cooking spray, as the latter may damage the accessories.

Recommended

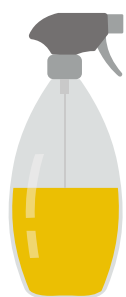

Oil Mister / Spray Bottle

Not Recommended



Cooking Spray

SET UP YOUR AIR FRYER OVEN

1. Place the air fryer oven on a stable, level, and heat-resistant surface.
2. Place the *crumb tray* in the bottom of the air fryer oven.
3. Plug the air fryer oven into an outlet.
4. Tap the *power icon*. The display will show $\square\pi$ (On).

USING YOUR AIR FRYER OVEN

1. Tap the desired *preset*.
2. Use the *temperature controls* to adjust the temperature.

For **TOAST** or **BAGEL** *presets*: Use the *shade controls* to adjust the toast shade.

3. Use the *time controls* to adjust the cook time.

For **TOAST** or **BAGEL** *presets*: Time adjustment is not available.

NOTE: See the **PRESET CHART** on pages 12-16 for each *presets'* settings and which accessory to use.

For *presets* without preheat: Place food into the air fryer oven and tap **START** to begin.

4. Tap **START**.

The *display* will show **PrE** (Preheat) and the air fryer oven will begin preheating.

Once preheated, the air fryer oven will beep and the display will show **Add Food** (Add Food).

5. Open the doors, carefully place food into the air fryer oven, and close the doors.

The cook time will begin automatically. When the cook time has elapsed, the air fryer oven will beep and the *display* will show **End** (End).

6. Open the doors. Carefully remove the food and place it on a heat-resistant surface.

















STOP / CANCEL COOKING

Tap **STOP / CANCEL** to pause cooking.

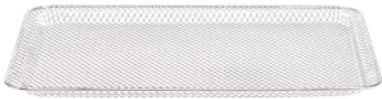Tap **START** to resume cooking.

Tap **STOP / CANCEL** twice to cancel cooking.

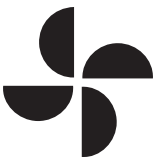













PRESET CHART

				
PRESET	 AIR FRY	 FRIES	 WINGS	 BACON
PREHEAT	Yes	Yes	Yes	Yes
TEMP				
DEFAULT	425°F	425°F	450°F	400°F
RANGE	170°F - 450°F	170°F - 450°F	170°F - 450°F	170°F - 450°F
TIME				
DEFAULT	20 min	18 min	25 min	10 min
RANGE	1 - 60 min	1 - 60 min	1 - 60 min	1 - 60 min
ACCESSORY	 *			
RACK POSITION	Position 3 or 4	Position 3 or 4	Position 4	Position 3 or 4
FAN				


*When air frying greasy foods, use the **Baking Pan** instead of the **Air Fry Basket**.

FOR CUSTOMER SERVICE VISIT WWW.GOURMIA.COM OR CALL 888.552.0033






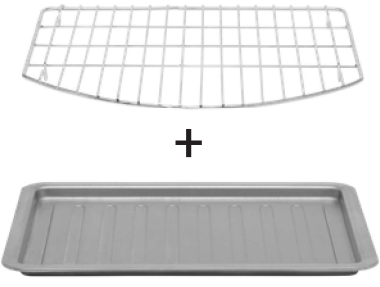


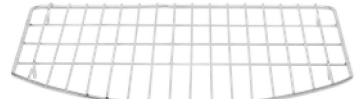
PRESET CHART

			
 VEGETABLES	 SNACKS	 SEAFOOD	 TOAST
Yes	Yes	Yes	No
400°F 170°F - 450°F	425°F 170°F - 450°F	400°F 170°F - 450°F	Shade 3 1 - 7 shades
25 min 1 - 60 min	12 min 1 - 60 min	10 min 1 - 60 min	N/A N/A
			
Position 3 or 4	Position 3 or 4	Position 3 or 4	Position 3 or 4
			Fan Off








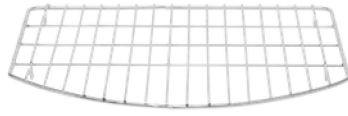

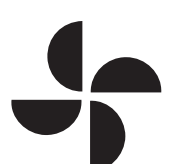

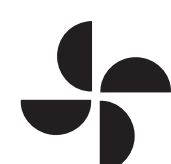
PRESET CHART

				
PRESET	 BAKE	 ROAST	 BAGEL	 CONVECTION BAKE
PREHEAT	Yes	Yes	Yes	Yes
TEMP				
DEFAULT	325°F	400°F	Shade 3	325°F
RANGE	170°F - 450°F	170°F - 450°F	1 - 7 shades	170°F - 450°F
TIME				
DEFAULT	30 min	25 min	N/A	10 min
RANGE	1 - 99 min	1 - 99 min	N/A	1 - 60 min
ACCESSORY				
RACK POSITION	Position 3 or 4	Position 3 or 4	Position 1 or 2	Position 3 or 4
FAN	Fan Off		Fan Off	

PRESET CHART

			
BROIL	PIZZA	REHEAT	KEEP WARM
Yes	Yes	No	No
450°F N/A	400°F 170°F - 450°F	325°F 170°F - 450°F	200°F 90°F - 200°F
10 min 1 - 60 min	12 min 1 - 60 min	15 min 1 - 60 min	30 min 1 - 99 min
			
Position 1 or 2	Air Fry Basket Position 4 or 5 Baking Pan Below Oven Rack	Position 3 or 4	Position 3 or 4
Fan Off	Fan Off		Fan Off

PRESET CHART

			
PRESET	 DEHYDRATE	 SLOW COOK	 POPCORN
PREHEAT	No	No	Yes
TEMP			
DEFAULT	135°F	Low 190°F	400°F
RANGE	90°F - 170°F	Low 190°F - High 250°F	300°F - 450°F
TIME			
DEFAULT	8 hrs	4 hrs	5 min
RANGE	30 min - 72 hrs	15 min - 12 hrs	1 - 15 min
ACCESSORY			
RACK POSITION	Position 3 or 4	Position 6	Upside Down Air Fry Basket Position 6 Baking Pan Position 6
			See USE THE POPCORN PRESET on page 17
FAN			

USING THE POPCORN PRESET

1. Tap **POPCORN**.


Optional: Use the *temperature* and *time controls* to adjust the temperature and time.

2. Tap **START**.

The *display* will show **PrE** (Preheat) and the air fryer oven will begin preheating.

3. Pour $\frac{1}{2}$ a cup of popcorn kernels into the *baking pan*.
4. Turn the *air fry basket* upside down and place it on top of the *baking pan*.

Once preheated, the air fryer oven will beep and the display will show **Add Food** (Add Food).

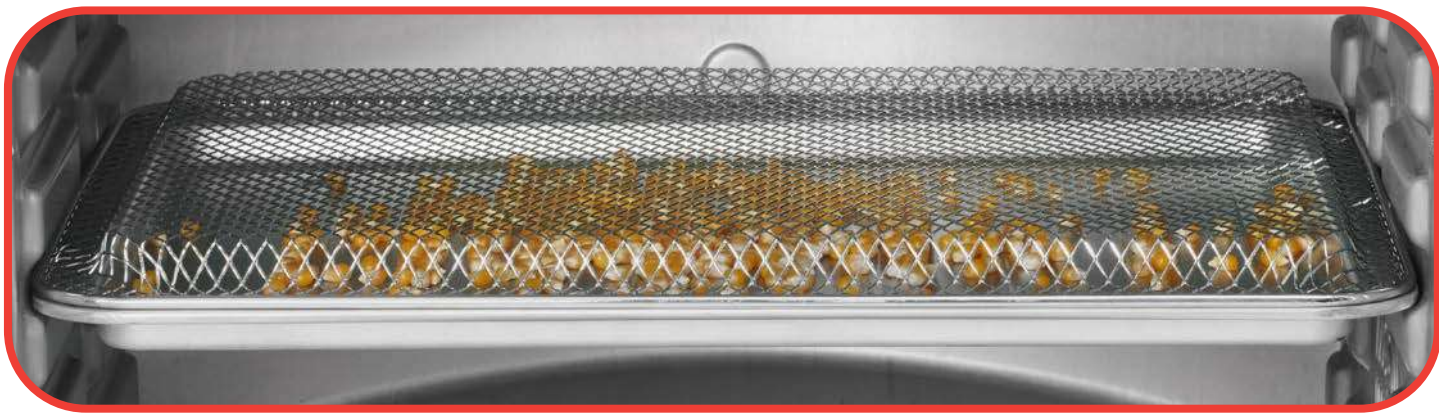

5. Open the doors, carefully insert the *baking pan* along with the upside down *air fry basket* into the bottom rack position, and close the doors.

The cook time will begin automatically. When the cook time has elapsed, the air fryer oven will beep and the *display* will show **End** (End).



6. Let sit one to two minutes until popping has stopped before opening the doors. Carefully remove the popcorn and place it on a heat-resistant surface.

COOKING TIPS

- For an extensive list of foods, their ideal amounts, temperature and time settings, along with preparation notes, see the **Air Fry Cooking Chart** and **Dehydrate Chart** on pages 60 through 63 of the **Gourmia Air Fryer Oven Recipe Book**.
- Spread food out in single layer in; do not overcrowd.
- When following instructions on item packaging or a standard recipe, reduce the cooking temperature by 25°F, check food for desired doneness a few minutes before cook time elapses, and cook a little longer if necessary.
- Always ensure raw proteins reach food-safe temperature.

TROUBLESHOOTING

Problem	Solution
Food is not cooked	Use smaller batches for more even cooking
	Raise temperature and continue cooking
Food is not browned evenly	Turn over food halfway through cooking process
	Cook similar sized foods together
White smoke is coming out of the air fryer oven	Clean the air fryer oven and accessories after each use to remove greasy residue

CLEANING & MAINTENANCE

WARNING:

NEVER immerse cord, plug, or the unit in water or any other liquid.

Before cleaning, tap the **power icon** to turn off the appliance, unplug it, and allow it to cool completely.

Do not use metal kitchen utensils or abrasive cleaning material to clean the unit or the accessories.

- Clean and dry the appliance and accessories after each use.
- Clean the accessories with hot water, mild liquid soap, and a non-abrasive sponge.
- Wipe the inside and outside of the unit with a damp cloth or non-abrasive sponge.
- The **air fry basket**, **oven rack**, and **baking pan** are top rack dishwasher safe.

STORAGE

- Unplug the appliance and let it cool down.
- Make sure all parts are clean and dry.
- Store the appliance in a clean and dry place.

ENVIRONMENT

Do not discard the appliance with normal household waste at the end of its life; instead, hand it in at an official collection point for recycling. Doing so will help to preserve the environment.

GUARANTEE AND SERVICE

If you need service or information or if you have a problem, please visit www.Gourmia.com or contact your distributor.

WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase and requires proof of purchase from an authorized seller. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at Gourmia's discretion. In the event that repair isn't possible, Gourmia will replace the product/part. If product repair/replacement won't suffice, Gourmia has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. Gourmia is not liable for any incidental or consequential damages incurred by such circumstances.

Only valid within the United States.

Register your product at www.Gourmia.com/warranty

Get cooking with **Gourmia**



We'd love to hear from you!

888.552.0033

info@gourmia.com