



COLOR CHANGING NEON FLEX

With remote control - for indoor and outdoor use

The American Lighting Color Chasing Neon Flex Light is the ultimate product for all of your accent, decorative, and seasonal lighting needs. With over 500 preset scenes, the uses are virtually endless.

- Customized LED Animated light shows
- Indoor and Outdoor use
- 8 Single colors (including pure white) for accent lighting
- Multiple dynamic color effects
- 24 Keys Remote control included





COLOR CHANGING NEON FLEX QUICK SPECS	
OPERATION INPUT VOLTAGE	120V DC
OPERATION OUTPUT VOLTAGE	24V DC
LENGTH	16.4ft
MAX RUN	32.8ft
RATING	cETLus Listed - indoor & outdoor use, FCC Compliant
WARRANTY	2 years

CONTROLLING VIA HANDHELD REMOTE

- Make sure all product connections are made prior to connectng power.
- Pull the plastic tab from the IR handheld remote control battery compartment prior to operation.
- Be sure to point the remote control in the direction of the front of the in-line controller (white square).
- Power the product ON, then select whether you are using 1 set or 2 sets connected together.
- For best results, select a color mix prior to selecting a chasing
- Remote Control Signal Distance: Up to 10 m / 32.8ft



COLOR CHANGING NEON FLEX HOW TO VIDEOS



Color Changing
Neon Flex Light Features



Tutorial:
Connecting 2 Segments

COLOR CHANGING NEON FLEX REMOTE BUTTON LAYOUT



	N LATOUT	
1	1 2	Select "1" when operating one reel of Color Changing Neon Flex Light Select "2" when operating two inter-connected reels of Color Changing Neon Flex Light
2		ON: Press Green to turn ON Color Changing Neon Flex Light OFF: Press Red to turn OFF Color Changing Neon Flex Light
3		Color Selection: Static (solid) White
4		Color Selection: Static (solid) Color Toggle: Red, Green, Blue, Orange, Yellow, Light Blue, or Purple
5	6	Color Selection: 3-Color Mix: Red, Green, and Blue
6	•	Color Selection: 7-Color Mix: Red, Green, Blue, Orange, Yellow, Light Blue, and Purple
7	6	Color Selection: 16-Color Mix: Red, Green, Blue, Dark Orange, Light Orange, Dark Yellow, Light Yellow, Light Green, Light Blue, Medium Blue, Dark Blue, Light Purple, Purple, Pink, Dark Pink, and White
8		Color Selection: Holiday Presets: - U.S. Flag = Red, Blue, and White - Pumpkin = Purple and Orange - Candy Cane = Red and Green
9		Directional Chasing Effects (< Power Side to End / End to Power Side >) - Constant Chasing Function; < Power Side to End; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8; Includes White Light between color intervals. - Constant Chasing Function; End to Power Side >; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8; Includes White Light between color intervals. - Stacking Spread to Fill Function; < Power Side to End; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8. - Stacking Spread to Fill Function; End to Power Side >; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8. - Staggered Chasing Function; < Power Side to End; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8; No illumination between color intervals. - Staggered Chasing Function; End to Power Side >; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8; No illumination between color intervals.
10		Rainbow Mode: Automatically Chasing 256 color mix; Does not work with Directional Chasing Effects.
11	•	Flash Mode: Automatically blinks through colors; Select preferred color settings from keys 3, 4, 5, 6, 7, or 8.
12	••••	Fade Mode: Automatically Fades selected color mix;Select preferred color settings from keys 3, 4, 5, 6, 7, or 8.
13		Auto Mode: Automatically cycles through <i>Rainbow, Flash,</i> and <i>Fade</i> modes, then <i>Directional Chasing Effects</i> using the active <i>Color Selection</i> .
14	**	Adjustable Speed: Increase or Decrease the speed of <i>Flash</i> and <i>Fade</i> modes or <i>Directional Chasing Effects</i> from keys 9, 11, 12, and 13.