

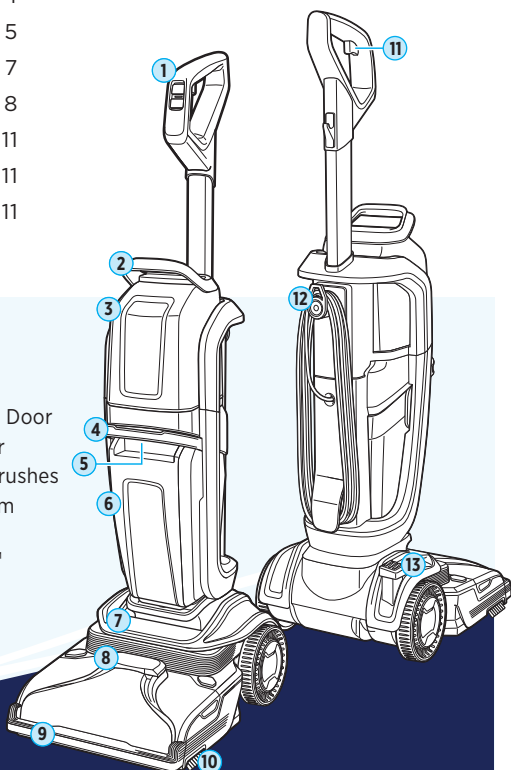


# REVOLUTION® HYDROSTEAM® UPRIGHT CARPET CLEANER WITH STEAM 3424, 3428, 3432 SERIES

What's in the Box?..... 3  
Assembly ..... 3  
Controls and Cleaning Modes..... 3  
Filling the Clean Water Tank..... 4  
Three Modes of Cleaning ..... 5  
Cleaning with the Hose and Tool..... 7  
After-Cleaning Care ..... 8  
Replacing the Belts and Brush Rolls ..... 11  
Troubleshooting..... 11  
Warranty ..... 11

## Product Overview

- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| 1. Handle with Fingertip Controls | 8. Accessory Hose Door            |
| 2. Clean Water Tank Carry Handle  | 9. HydroSteam Bar                 |
| 3. Clean Water Tank               | 10. EdgeSweep® Brushes            |
| 4. Dirty Water Tank Carry Handle  | 11. Formula & Steam Spray Trigger |
| 5. Machine Carry Handle           | 12. Quick Release™ Cord Wrap      |
| 6. Dirty Water Tank               | 13. Recline Pedal                 |
| 7. Mode Indicator Lights          |                                   |



### Meet your new BISSELL® product!

Go to [support.BISSELL.com](https://support.BISSELL.com) for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

# IMPORTANT SAFETY INSTRUCTIONS



## READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



## WARNING

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Use indoors only.
- Do not immerse. Use only on carpet moistened by cleaning process.
- Always install float before any wet pick-up operation.
- Use only cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Turn OFF all controls before plugging or unplugging appliance.

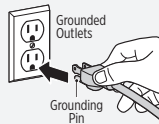
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Unplug from outlet before filling, rinsing or cleaning.
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaner.
- Do not apply steam directly to any person or animal.
- Do not touch the steam cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.
- Risk of injury from moving parts. "Brushes" may start unexpectedly. Unplug before cleaning or servicing.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Keep appliance on a level surface.
- Do not leave steam cleaner unattended.
- Liquid must not be directed towards equipment containing electrical components.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the three-prong grounded plug.
- Unplug before connecting Turbo Brush.
- Do not carry the appliance while in use.

## WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

### GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.



## SAVE THESE INSTRUCTIONS







**THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.**

## IMPORTANT INFORMATION

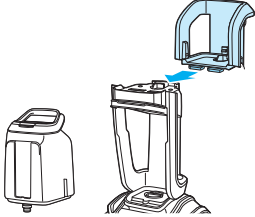
 
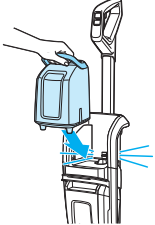
- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Brush roll continues to turn while product is turned ON and handle is in use. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

## What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

					
Upper Body and Clean Water Tank	Lower Body with Dirty Water Tank	Handle	Hose & Tool Bag	Tools (vary by model)	Trial Formula

## Assembly

		
<p><b>1.</b> Remove clean tank from upper body. Ensure upper body is level with lower body. Tip in upper body and slide into lower body from the back.</p>	<p><b>2.</b> Insert handle into machine until it clicks into place.</p>	<p><b>3.</b> Insert clean tank into machine until it clicks into place.</p>

## Controls and Cleaning Modes

### Fingertip Controls



#### Mode

Switch between Steam Pretreat, SteamWash Max Clean, and Quick Dry modes. Mode selection appears on the foot display.



#### Power

Turn the machine ON and OFF.

### Foot Display & Cleaning Modes



#### Steam Pretreat

For sticky messes

- Slime
- Jelly
- Syrup
- Honey
- Caramel/Chocolate Sauce

*Do not use on blood or urine*



#### SteamWash™ Max

For everyday messes

- Blood
- Urine
- Juice
- Wine
- Mud/Dirt
- Grease
- Vomit
- Baby Food
- Spaghetti Sauce




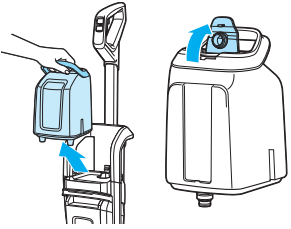
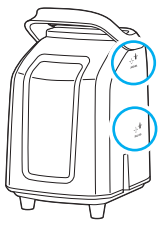
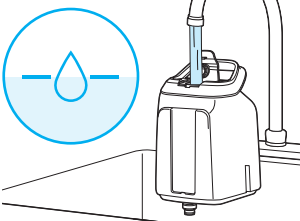
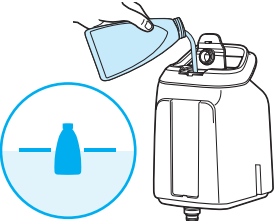
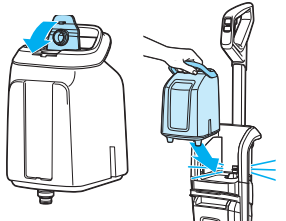
#### Quick Dry

Freshen carpets with fast dry time

- Blood
- Urine

## Filling the Clean Water Tank

This machine is compatible with BISSELL® formulas made for upright carpet cleaners. Always use genuine BISSELL formulas for your machine. Our formulas are specially designed in our lab to work with your machine and deliver professional-style results. Other formulas may harm the machine.

		
<p><b>1.</b> Choose your formula.* Scan the QR code with your smartphone camera or visit BISSELL.com for formulas.</p>	<p><b>2.</b> Lift tank to remove from machine. Flip open lid.</p>	<p><b>3.</b> Choose large or small area fill lines to suit your needs.</p>
		
<p><b>4.</b> Add <b>warm tap water</b> (140°F/60°C max) to water fill line. <b>Do not use boiling water. Do not heat water in microwave.</b></p>	<p><b>5.</b> Add <b>BISSELL formula</b> to formula fill line.</p>	<p><b>6.</b> Close lid until it clicks. Reinstall clean tank. It will click into place.</p>

**\*Compatible formulas include:** Clean + Refresh, PET Stain & Odor, PRO MAX, Clean + Protect, PET PRO OXY Urine Eliminator, Oxy Boost, Pet Oxy Boost, Simply Carpet Deep Clean, Clean + Allergen, Pro Oxy Deep Clean

**⚠ WARNING** To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

# Three Modes of Cleaning



## Startup

- This appliance is primarily a carpet cleaner with a steam-cleaning feature.
- Remove any solids and use a dry vacuum cleaner over area before using your deep cleaner.
- To prevent damage to Berber-style carpets, avoid repeated strokes in the same area. Before cleaning area rugs, check the manufacturer's tag and test an inconspicuous spot on the rug for colorfastness. **Do not use on silk or delicate rugs.**
- Stay off carpet until dry.

<p><b>1.</b> Plug into a properly grounded outlet.</p>	<p><b>2.</b> Press recline pedal to recline machine.</p>	<p><b>3.</b> Press power button on handle to turn ON. Water heater will turn on. Machine defaults to Steamwash Max mode with brush rolls and vacuum motor on. Icon on foot will blink then turn solid when heater is ready to make steam (&lt;60 seconds).</p>

## Steam Pretreat Mode

Loosen tough stains before removing with SteamWash Max Clean mode. **Brush rolls and vacuum motor will shut off** in this mode.

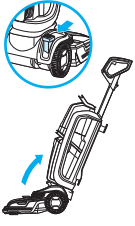
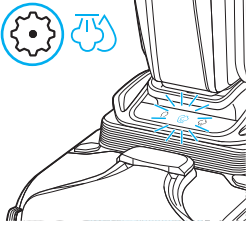
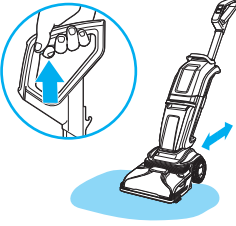
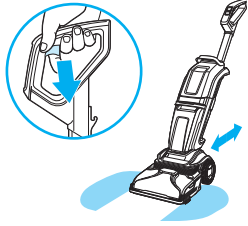
<p><b>1.</b> Press recline pedal to recline machine.</p>	<p><b>2.</b> Press mode button on handle until Steam Pretreat icon is illuminated. The motor will turn off and the brush rolls will stop spinning. Icon will blink until heater is ready to make steam.</p>	<p><b>3.</b> <b>Pull trigger to release steam</b> and move machine forward and back over stain for 20 seconds.</p>	<p><b>4.</b> After steam pretreat, press mode button to clean the stain in SteamWash Max mode.</p>

CONTINUED ON NEXT PAGE 

## Three Modes of Cleaning (continued)

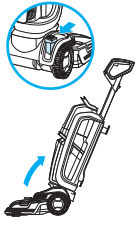
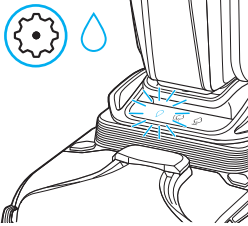
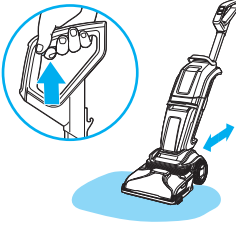
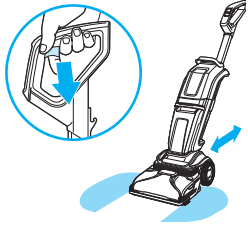
### SteamWash™ Max Clean Mode

Use water, formula, and steam to clean your carpet. **Steam is present but not visible in this mode.** Carpets will dry in about 8 hours.

			
<p><b>1.</b> Press recline pedal to recline machine.</p>	<p><b>2.</b> Press mode button until SteamWash Max Clean icon illuminates on foot. When ready, indicator light will stay illuminated.</p>	<p><b>3.</b> <b>Pull trigger</b> to dispense water, formula, and steam. While holding trigger, make two “wet passes,” moving machine forward and back across carpet.</p>	<p><b>4.</b> <b>Release trigger</b> and make “dry passes” by pushing machine forward and back across carpet until water can no longer be seen in nozzle.</p>

### Quick Dry Mode

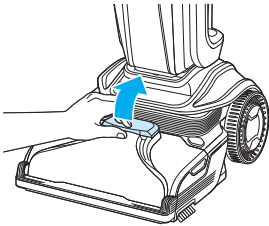
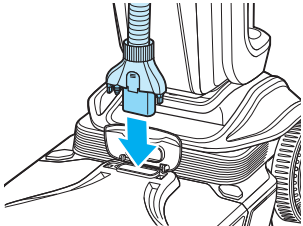
Water and formula for a quick clean. Carpets will dry in about 30 minutes.

			
<p><b>1.</b> Press recline pedal to recline machine.</p>	<p><b>2.</b> Press mode button until Quick Dry icon illuminates on foot.</p>	<p><b>3.</b> <b>Pull trigger</b> to dispense water, formula, and steam. While holding trigger, make two “wet passes,” moving machine forward and back across carpet.</p>	<p><b>4.</b> <b>Release trigger</b> and make “dry passes” by pushing machine forward and back across carpet until water can no longer be seen in nozzle.</p>

# Cleaning with the Hose and Tool

**Note:** Only water and formula flows through hose and tool, not steam.

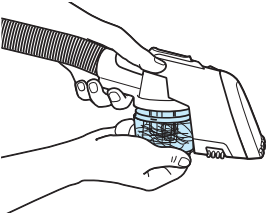
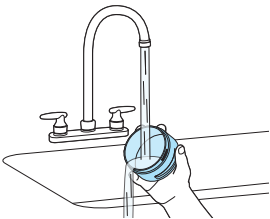
## Attaching the Hose

	
<p><b>1.</b> Lift accessory hose door on top of foot on the front of machine. Flip door toward machine to open.</p>	<p><b>2.</b> Insert hose until it clicks into place. Be sure colored hose release clip is facing out, away from machine.</p> <p>Attach tool to end of hose.</p>

## 2-in-1 Upholstery Tool

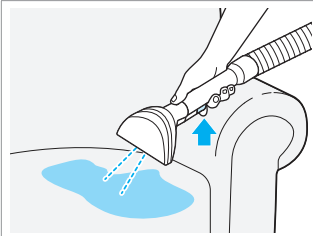
		
<p><b>1.</b> Switch between Dry and Wet settings and turn machine ON.</p>	<p><b>2a. Dry Cleaning</b></p> <p>Vacuum up debris from carpet or upholstery.</p>	<p><b>2b. Wet Cleaning</b></p> <p>Hold down trigger to activate spray. Release trigger and suction up the stain.</p>

## Cleaning the 2-in-1 Upholstery Tool

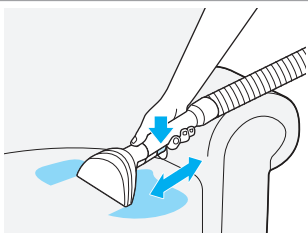
	
<p><b>1.</b> Twist dirt cup to open. Empty into a garbage bin.</p>	<p><b>2.</b> Rinse dirt bin. Let dry completely before reinstalling.</p>

CONTINUED ON NEXT PAGE ➔

### 3" and 6" Tool



**1.** Point tool above spot or stain and press spray trigger.

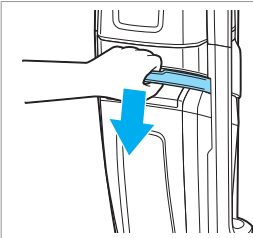


**2.** Release spray trigger and gently scrub the stain.

## After-Cleaning Care

### Emptying the Dirty Water Tank

**Note:** When the tank is full, the float will shut off suction and emit a high-pitched sound indicating it is time to empty your tank.



 
**1.** To release dirty water tank, press down on tank handle and tilt tank toward you.



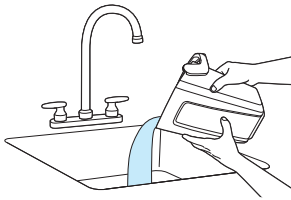
**2.** Remove tank and carry to disposal area.



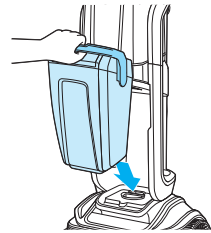
**3.** Unlock by rotating handle back.



**4.** Grab lid in recessed area on both sides and pull up to remove.



**5.** Empty dirty water into utility sink.  
Reinstall lid and rotate handle forward to lock in place.

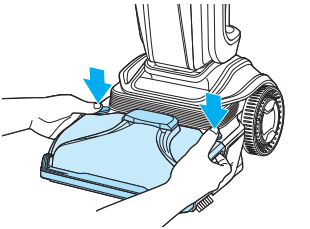
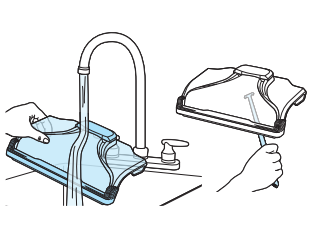
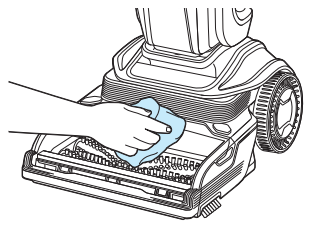


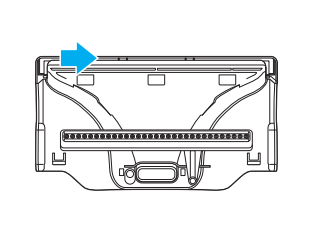
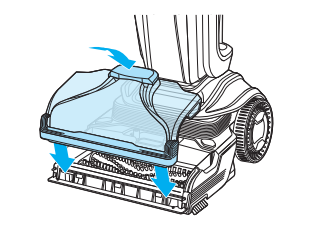
**6.** Reinstall tank. **Insert bottom first.** Then, tilt tank toward machine and push top in until it clicks into place.



## Cleaning the Machine

Nozzle may be HOT. Let machine cool before touching.

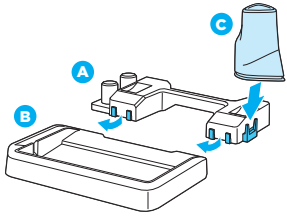
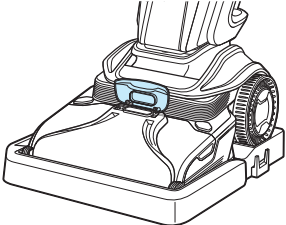
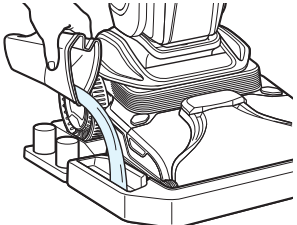
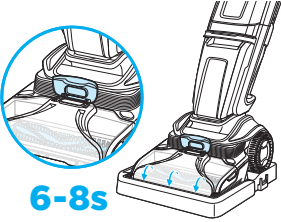
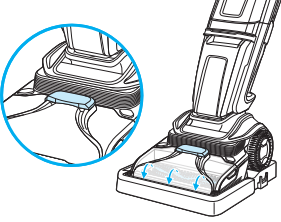
		
<p><b>1.</b> Place fingertips into grips on both sides of nozzle. Press release buttons with thumbs and rotate nozzle to remove.</p>	<p><b>2.</b> Open hose door. Rinse nozzle with warm water. Remove debris with clean out tool. <b>Note:</b> Parts are not dishwasher or automatic washing machine safe.</p>	<p><b>3.</b> If brush roll chamber is dirty, clean with a cloth.</p>

	
<p><b>4.</b> Check steam bar for clogs. Wipe underside of steam bar with a wet towel or manually remove visible clogs if necessary.</p>	<p><b>5.</b> Let nozzle dry before reassembling. Reinstall nozzle by first lining up tabs with grooves of foot. Rotate nozzle back into place until you feel two clicks.</p>

CONTINUED ON NEXT PAGE ➔

**⚠ WARNING** To reduce the risk of injury, do not touch the steam cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.

## Using the Rinse and Storage Tray (select models)

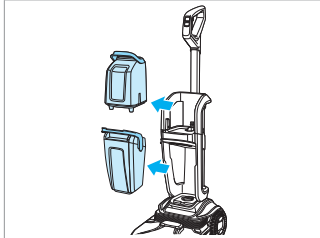
		
<p><b>1.</b> There are 2 hooks on each side of part A that hook under part B. Press B down onto A. The water cup (C) can be stored on the side of the tray.</p>	<p><b>2.</b> Place machine on tray and open hose door on foot.</p>	<p><b>3.</b> Fill rinse cup with fresh tap water to the fill line printed on cup. Pour water into tray as shown.</p>
 <p><b>6-8s</b></p>		
<p><b>4.</b> With hose tool door open, recline machine and press power button to turn ON. Run for 6-8 seconds to rinse brush rolls.</p>	<p><b>5.</b> Close the hose tool door to extract water from the tray. Repeat these steps 1-2 times to rinse foam out of the system. Press power button to turn machine OFF.</p>	

## Storing Your Machine

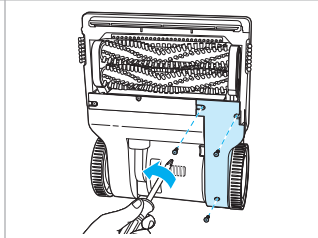
Once your cleaning is complete, make sure both the dirty and clean water tanks are emptied, rinsed out, and dried before the next use. Wrap cord around cord wrap for storage. Store machine in a protected, dry area.

# Replacing the Belts and Brush Rolls

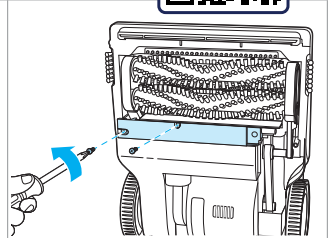
Scan the QR code for a how-to video.



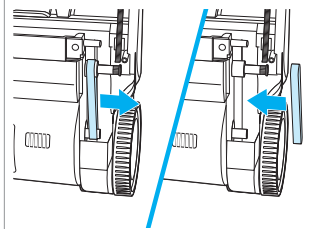
**1.** Unplug machine and remove both tanks. While reclined, lay machine on its front.



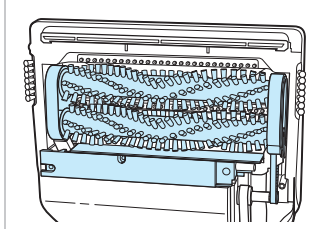
**2.** Remove belt cover. Use Phillips-head screwdriver to remove three screws.



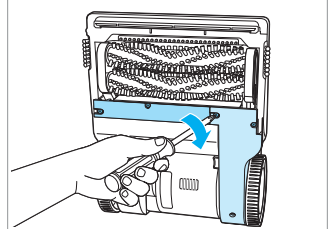
**3.** Use Phillips-head screwdriver to remove two screws. Then remove brush roll assembly by unhooking belt.



**4.** If flat belt is broken, place a new belt around red pulley. Stretch belt toward back of machine and around metal shaft.



**5.** If brush roll belts or brush roll assembly is broken, replace with new brush roll assembly.



**6.** Reinstall brush roll assembly, making sure to loop belt over the shaft. Reinstall belt cover.

## Troubleshooting

Visit [support.BISSELL.com](http://support.BISSELL.com) or scan the QR code with your smartphone camera for troubleshooting.



**Note:** Any other servicing should be performed by an authorized service representative.

## Warranty

Limited 5-year warranty, may vary by state. Visit [support.BISSELL.com](http://support.BISSELL.com) or call 1-800-237-7691 for complete warranty information.

**⚠ WARNING** To reduce the risk of injury, do not touch the steam cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.



## We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors, and pet homelessness disappear.

Visit [BISSELLsavespets.com](https://www.bissellsavespets.com) to learn more.

## But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to [support.BISSELL.com](https://support.bissell.com).



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2023 BISSELL Inc. All rights reserved.  
Part Number 1638927 09/23 v2



SOPORTE



PIEZAS



VIDEOS



INFORMACIÓN



REGISTRO



## Pero espera, ¡eso no es todo!

Únete a nosotros en línea para recibir una guía completa de tu nuevo producto, incluyendo resolución de problemas, registro del producto, piezas y más.

[Visita \*\*support.BISSELL.com\*\*.](https://www.bissell.com/support)

## ¡Estamos moviendo nuestras colas!

BISSELL apoya a salvar con orgullo a BISSELL Pet Foundation® y su misión de ayudar a salvar a las mascotas sin hogar. Cuando compras un producto de BISSELL®, también ayudas a salvar mascotas. Nos enorgullece diseñar productos que ayudan a que la sociedad, olores y el desamparo de las mascotas desaparezca. Para obtener más información, visita [BISSELLsavespets.com](https://www.bissellsavespets.com).



## Reemplazo de bandas y cepillos giratorios

Escanea el código QR para ver un video tutorial.



	<p><b>1.</b> Desconecta el equipo y retira ambos depositos. Mientras esté reclinado, coloca el equipo sobre su parte frontal.</p>
	<p><b>2.</b> Retira la cubierta de la banda. Usa un destornillador Phillips para retirar tres tornillos.</p>
	<p><b>3.</b> Usa un destornillador Phillips para retirar dos tornillos. Posteriormente desengancha la banda y retira el montaje del cepillo giratorio.</p>

	<p><b>4.</b> Si la banda plana está rota, coloca una nueva alrededor de la polea roja. Extra la banda hacia la parte trasera del equipo y alrededor del metálico.</p>
	<p><b>5.</b> Si las bandas o el montaje del cepillo giratorio están rotos, reemplaza con un nuevo montaje del cepillo giratorio.</p>
	<p><b>6.</b> Instala nuevamente el cepillo giratorio, asegurándote de enrollar la banda sobre el eje. Instala nuevamente la cubierta de la banda.</p>

## Solución de problemas

Visita [support.BISSELL.com](http://support.BISSELL.com) o escanea el código QR con la cámara de tu smartphone para solucionar problemas.



**Nota:** Cualquier otro servicio debe ser realizado por un representante de servicio técnico autorizado.

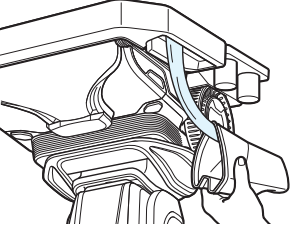
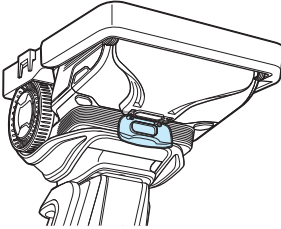
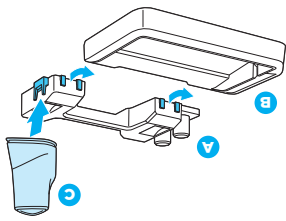
## Garantía

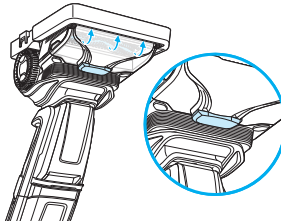
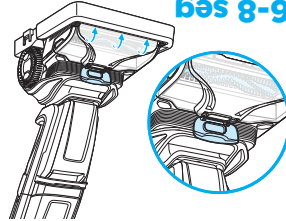
Garantía limitada por 5 años, puede variar según el estado. Visita [support.BISSELL.com](http://support.BISSELL.com) o llama al 1-800-237-7691 para obtener información completa sobre la garantía.

## ADVERTENCIA

¡Para reducir el riesgo de lesiones, no toques la boquilla de limpieza a vapor o las superficies cercanas cuando estés limpiando a vapor o cuando la boquilla esté caliente.

## Uso de la bandeja de enjuague y almacenamiento (modelos seleccionados)

		 <p><b>1.</b> Hay 2 ganchos a cada lado de la pieza A que se enganchan debajo de la pieza B. Presiona B sobre A. El vaso de agua (C) puede guardarse en la parte lateral de la bandeja.</p>
<p><b>3.</b> Llena el contenedor de enjuague con agua de grifo hasta la línea de llenado impresa. Vierte el agua sobre la bandeja como se muestra.</p>	<p><b>2.</b> Coloca el equipo sobre la bandeja y abre la puerta de la manguera en la base.</p>	<p><b>4.</b> Con la puerta de accesorios de la manguera abierta, reclina el equipo y presiona el botón de encendido para activar. Mantén activo entre seis y ocho segundos para enjuagar los cepillos giratorios.</p>

	<p><b>6-8 seg</b></p> 
<p><b>5.</b> Cierra la puerta de la herramienta de manguera para extraer el agua de la bandeja. Repite estos pasos 1 y 2 veces para retirar la espuma del sistema. Presiona el botón de encendido para desactivar el equipo.</p>	<p><b>Almacenamiento de tu equipo</b></p> <p>Una vez que termines de limpiar, asegúrate de limpiar, enjuagar y secar el depósito de agua sucia y el almacenamiento. Guarda el equipo en un área seca y protegida.</p>

Limpieza del equipo

La boquilla puede estar CALIENTE. Permite que el equipo se enfríe antes de tocarlo.

<p><b>1.</b> Coloca las puntas de los dedos en las agarraderas en ambos extremos de la boquilla. Presiona los botones de liberación con los pulgares y gira la boquilla para retirarla.</p>	<p><b>2.</b> Abre la puerta de la manguera. Enjuaga la boquilla con agua tibia. Retira los desechos con la herramienta de limpieza. <b>Nota:</b> No es seguro lavar las piezas en el lavavajillas o en la lavadora automática.</p>	<p><b>3.</b> Si la cámara del cepillo giratorio está sucia, límpiala con un trapo.</p>

 
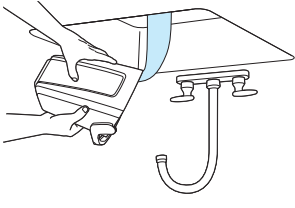
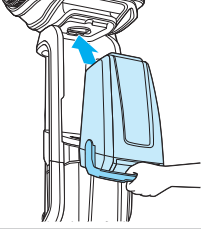
<p><b>4.</b> Revisa la barra de vapor para detectar obstrucciones. Limpia la parte inferior de la barra de vapor con una toalla húmeda o retírala manualmente. Las obstrucciones visibles si es necesario.</p>	<p><b>5.</b> Permite que la boquilla se seque antes de instalarla nuevamente. Instala nuevamente la boquilla alineando las pestañas con las ranuras de la base. Gira nuevamente a su lugar la boquilla hasta que escuches dos clics.</p>

CONTINUA EN LA PÁGINA SIGUIENTE

**ADVERTENCIA**

¡Para reducir el riesgo de lesiones, no toques la boquilla de limpieza a vapor o las superficies cercanas cuando estés limpiando a vapor o cuando la boquilla esté caliente.



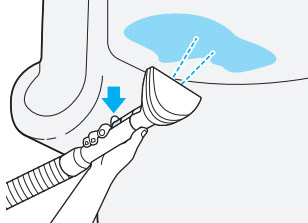
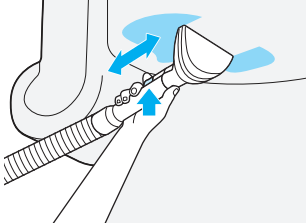
<p><b>4.</b> Sujeta la cubierta del área ahuecada en ambos extremos y levántala para retirar.</p>	<p><b>5.</b> Vacía el depósito de agua sucia en el fregadero. Instala nuevamente la cubierta y gira la manija hacia adelante para que encaje en su lugar.</p>	<p><b>6.</b> Instala nuevamente el depósito. Después, inclina el depósito hacia el equipo y presiona la parte superior hasta que encaje en su lugar.</p>
		

<p><b>1.</b> Para liberar el depósito de agua sucia, mantén presionada la manija e inclina el depósito hacia ti.</p>	<p><b>2.</b> Retira el depósito y llévalo al área de desperdicios.</p>	<p><b>3.</b> Desbloquee girando de nuevo la manija.</p>
		

**Nota:** Cuando el depósito esté lleno, el flotador detendrá la succión y emitirá un sonido agudo que indica que es momento de vaciar tu depósito.

## Vaciar el depósito de agua sucia

## Cuidados después de la limpieza

<p><b>1.</b> Apunta la herramienta sobre el lugar o la mancha y presiona el rociador.</p>	<p><b>2.</b> Aplica el rociador y frota suavemente la mancha.</p>
	

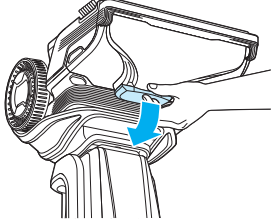
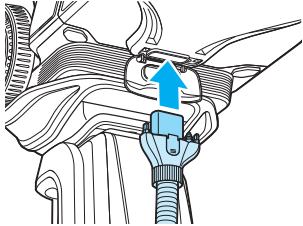
## Herramienta de 3" y 6"

Limpieza con la manguera y la herramienta (continuación)

 
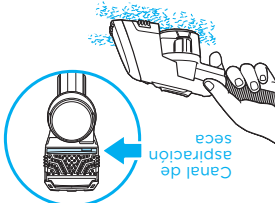
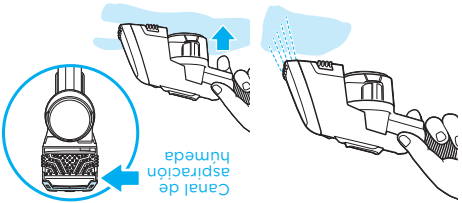
## Limpeza con la manguera y la herramienta

**Nota:** Solo agua y fórmula fluyen a través de la manguera y la herramienta, no vapor.

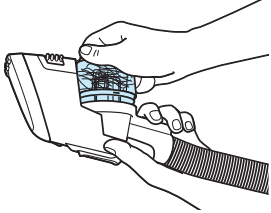
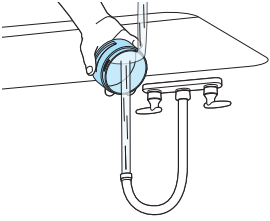
### Conexión de la manguera

	<p><b>1.</b> Levanta la puerta de accesorios de la manguera en la parte superior del equipo. Gira la puerta hacia el equipo para abrir.</p>
	<p><b>2.</b> Coloca la manguera hasta que encaje en su lugar. Asegúrate de que el clip de liberación de color esté orientado en sentido contrario al equipo. Fija la herramienta en el extremo de la manguera.</p>

### Herramienta de tapicería 2 en 1

	<p><b>1.</b> Cambia entre modo Seco y Húmedo y enciende el equipo.</p> <p><b>2a. Limpieza en seco</b> Aspira los desechos de la alfombra o tapiz.</p>  <p>Canal de aspiración seca</p>
<p><b>2b. Limpieza en húmedo</b> Presiona el activador para encender el rociador. Libera el activador y succiona la mancha.</p>  <p>Canal de aspiración húmeda</p>	<p><b>1.</b> Cambia entre modo Seco y Húmedo y enciende el equipo.</p>

### Limpiar con la herramienta de tapicería 2 en 1

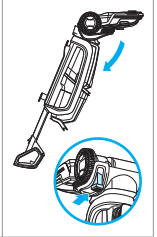
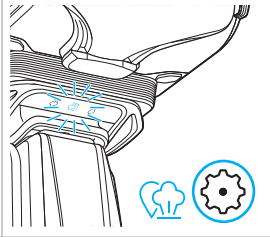
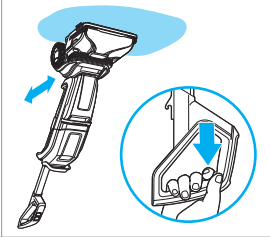
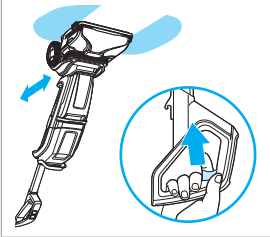
	<p><b>1.</b> Gira el contenedor de desechos para abrirlo. Vacía en un contenedor de basura.</p>
	<p><b>2.</b> Enjuaga el contenedor de desechos. Deja secar completamente antes de instalarlo de nuevo.</p>

CONTINUA EN LA PÁGINA SIGUIENTE

Tres modos de limpieza (continuación)

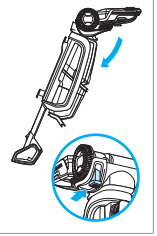
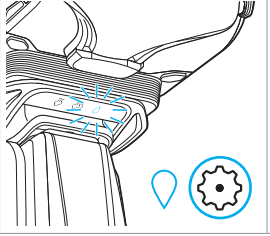
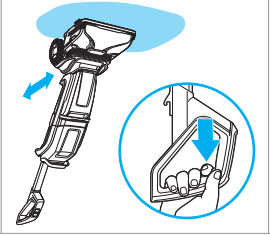
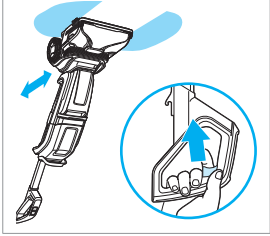
 **Modo de limpieza SteamWash™ Max**

Usa agua, fórmula y vapor para limpiar tu alfombra. **El vapor está presente pero no es visible en este modo.** Las alfombras se secarán en unas 8 horas.

<p><b>1.</b> Presiona el pedal para reclinar el equipo.</p> 	<p><b>2.</b> Pulsa el botón de modo hasta que se ilumine el icono de SteamWash Max Clean en el pie. Cuando este listo, la luz indicadora se quedará fija.</p> 	<p><b>3. Presiona el activador</b> para dispensar agua, fórmula y vapor. Mientras empujando el equipo hacia adelante y hacia atrás sobre la alfombra.</p> 	<p><b>4. Suelta el activador</b> y realiza "pasadas en seco" empujando el equipo hacia adelante y hacia atrás sobre la alfombra hasta que ya no observes agua en la boquilla.</p> 
--	---	---	--

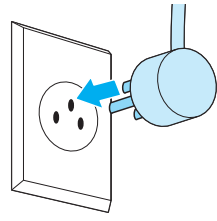
 **Modo Quick Dry (secado rápido)**

Agua y fórmula para una limpieza rápida. Las alfombras se secarán en aproximadamente 30 minutos.

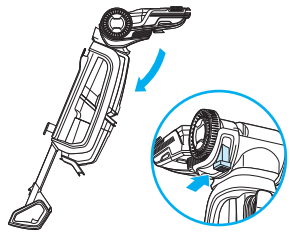
<p><b>1.</b> Presiona el pedal para reclinar el equipo.</p> 	<p><b>2.</b> Pulsa el botón de modo hasta que se ilumine el icono Quick Dry en el pie.</p> 	<p><b>3. Presiona el activador</b> para dispensar agua, fórmula y vapor. Mientras empujando el equipo hacia adelante y hacia atrás sobre la alfombra.</p> 	<p><b>4. Suelta el activador</b> y realiza "pasadas en seco" empujando el equipo hacia adelante y hacia atrás sobre la alfombra hasta que ya no observes agua en la boquilla.</p> 
--	--	---	--

## Puesta en marcha

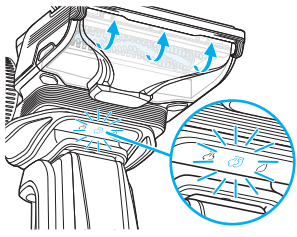
- Este electrodoméstico es principalmente una aspiradora para alfombras con una función de limpieza con vapor.
- Retira cualquier desecho sólido y usa una aspiradora sobre el área antes de utilizar el producto de limpieza profunda.
- Para evitar dañar las alfombras de estilo beberber, evita dar pasadas repetidas en la misma zona. Antes de limpiar alfombras, consulta la etiqueta del fabricante y haz una prueba de fijación del color sobre la alfombra en un lugar poco visible. **No utilices sobre seda o alfombras delicadas.**
- Evita pasar por la alfombra hasta que se seque.



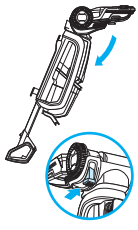
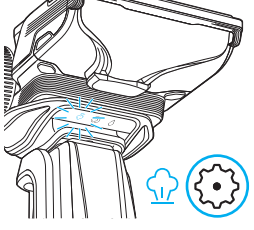
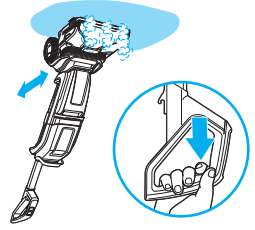
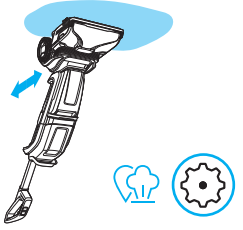
**1.** Conecta en un tomacorrientes con conexión a tierra apropiado.



**2.** Pisa el pedal de reclinación para reclinar la máquina.



**3.** Presiona el botón de encendido en la manija para activar el equipo. El calentador de agua se encenderá. El modo predeterminado en el equipo es SteamWash Max con cepillos giratorios y motor de la aspiradora activados. El icono en el pie parpadeará y luego se pondrá fijo cuando el calentador esté listo para producir vapor (<60 segundos).

<p><b>1.</b> Presiona el pedal para reclinar el equipo.</p> 	<p><b>2.</b> Pulsa el botón de modo de la manija hasta que se ilumine el icono Steam Pretreat. El motor se apagará y los rodillos del cepillo dejarán de girar. El icono parpadeará hasta que el calentador esté listo para producir vapor.</p> 	<p><b>3. Presiona el activador para liberar el vapor y mueve el equipo hacia adelante y hacia atrás sobre la mancha durante 20 segundos.</b></p> 	<p><b>4.</b> Después del pretratamiento con vapor, pulsa el botón de modo para limpiar la mancha en el modo SteamWash Max.</p> 
--	---	--	---

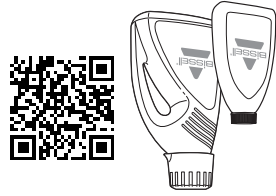
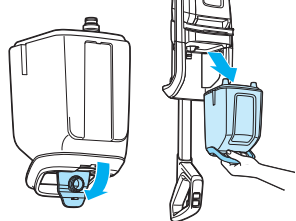
Arfoja las manchas difíciles antes de eliminarlas con el modo SteamWash Max Clean. **Los cepillos giratorios y el motor de la aspiradora se apagaran** en este modo.

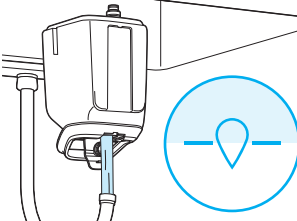
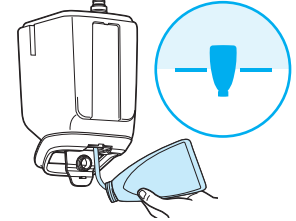
## Modo Steam Pretreat



# Lenar el depósito de agua limpia

Esta máquina es compatible con las fórmulas BISSELL® fabricadas para aspiradoras verticales. Utiliza siempre fórmulas BISSELL originales para tu máquina. Nuestras fórmulas están diseñadas especialmente en nuestro laboratorio para funcionar con tu equipo y ofrecer resultados profesionales. Otras fórmulas podrían dañar el equipo.

		<p><b>3.</b> Selecciona entre las líneas de llenado para área grande o pequeña de acuerdo a tus necesidades.</p>
<p><b>1.</b> Elige su fórmula.* Escanea el código QR con la cámara de tu teléfono o visita BISSELL.com para obtener más información sobre las fórmulas.</p>	<p><b>2.</b> Levanta el depósito para retirarlo del equipo. Gira la cubierta abatible.</p>	<p><b>6.</b> Cierra la cubierta hasta que encaje en su lugar. Instala nuevamente el depósito de agua limpia. Encajará con un clic en su lugar.</p>

 





		<p><b>4.</b> Agrega agua tibia del frío (140°F/60°C máx) hasta la línea WATER FILL. No uses agua hirviendo. No calientes el agua en el microondas.</p> <p><b>5.</b> Agrega la fórmula BISSELL a la línea de llenado de la fórmula.</p>
--	---	--

\*Las fórmulas compatibles son: Clean + Refresh, PET Stain & Odor, PRO MAX, Clean + Protect, PET PRO OXY Urine Eliminator, Oxy Boost, Pet Oxy Boost, Simply Carpet Deep Clean, Clean + Allergen, Pro Oxy Deep Clean

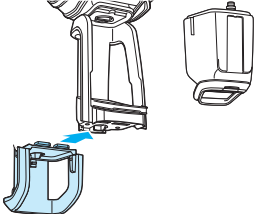
 
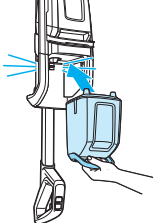
**ADVERTENCIA** Para reducir el riesgo de incendio y descarga eléctrica debido a daños en los componentes internos, utiliza solo la fórmula de limpieza BISSELL diseñada para esta máquina.

## ¿Qué hay en la caja?

Los accesorios estándar pueden variar según el modelo. Para identificar lo que debería estar incluido con tu compra, consulta la lista de "contenido de la caja" situada en la solapa superior de la caja.

	Parte superior del equipo y depósito de agua limpia
	Parte inferior del equipo con el depósito de agua sucia
	Manija
	Bolsa para la manguera y herramientas
	Las herramientas varían de acuerdo al modelo.
	Fórmula de prueba

## Ensamblado

	<b>1.</b> Retira el depósito de agua limpia de la parte superior del equipo. Asegúrate de que la parte superior del equipo esté alineada con la inferior. Inclina la parte superior del cuerpo y deslízala hacia la parte inferior desde atrás.
	<b>2.</b> Coloca la manija en el cuerpo del equipo hasta escuchar que encaja en su lugar.
	<b>3.</b> Coloca el depósito de agua limpia en el cuerpo del equipo hasta escuchar que encaja en su lugar.

## Controles y modos de limpieza

### Controles manuales



#### Modo

Cambia entre los modos Steam Pretrat, SteamWash Max Clean y Quick Dry. La selección del modo aparece en la pantalla de la base.



#### Enciende y apaga la máquina.

apaga la máquina.

## Pantalla de la base y modos de limpieza



### Steam Pretrat

Para lios pegajosos

- Baba
- Jalea
- Jarabe
- Salsa de caramelo/ chocolate

*No utilizar en sangre u orina*



### SteamWash™ Max

Para los lios cotidianos

- Sangre
- Orina
- Jugo
- Vino
- Lodo/ bebés
- Comida para bebés
- Salsa de spaghetti



### Quick Dry (Secado rápido)

Renueva las alfombras con el secado rápido

- Sangre
- Orina



¿Qué hay en la caja?..... 5

Montaje..... 5

Controles y modos de limpieza..... 5

Llenado del depósito de agua limpia..... 4

Tres modos de limpieza..... 5

Limpieza con la manguera y la herramienta..... 7

Cuidados después de la limpieza..... 8

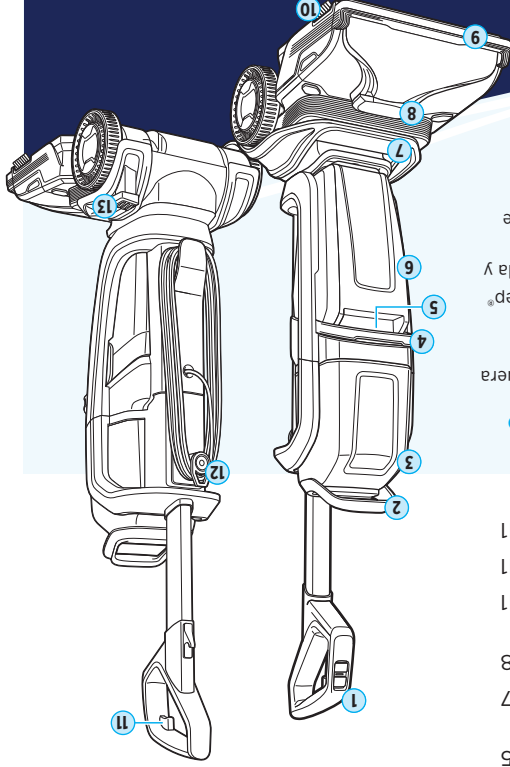
Sustitución de las correas y los rodillos del cepillo..... 11

Solución de problemas..... 11

Garantía..... 11

### Descripción general del producto

1. Manija con controles manuales
2. Manija de transporte del depósito de agua limpia
3. Depósito de agua limpia
4. Manija de transporte del depósito de agua sucia
5. Manija de transporte del equipo
6. Depósito de agua sucia
7. Luces indicadoras de modo
8. Puerta de la manguera adicional
9. Barra HydroSteam
10. Cepillos Edgesweep™
11. Rotador de fórmula y vapor
12. Enrollador de cable Quick Release™
13. Pedal de reclinado



### ¡Conoce tu nuevo producto BISSELL!

Visita [support.BISSELL.com](http://support.BISSELL.com) para conocer tu nueva compra, con videos, consejos, asistencia y mucho más. ¿Deseas comenzar de inmediato? Esta guía incluye toda la información que necesitas para configurar su nuevo producto. Echemos un vistazo...

