




**PORTABLE MIRRORED
6L BEAUTY
FRIDGE
WITH LED LIGHTING**

USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Cleaning and Maintenance
- Storage
- Terms and Conditions
- Warranty Registration

RJ48-6-ML-SERIES

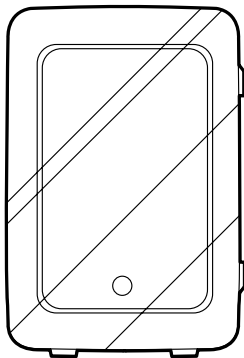

COOKING FORWARD™

Welcome!

When we designed our Portable Mirrored 6L Beauty Fridge with LED Lighting, we had your beauty and skincare routine in mind. Refrigerating cosmetics, toners, and moisturizers can extend their shelf life and applying chilled products delivers a cooling effect that can reduce inflammation and the appearance of under eye bags. The mirrored, LED-lighted door frames your face while the fridge's compact size is perfect for the bedroom, powder room, dorm room, office, and even your car. Its 6-liter capacity will also keep food, drink, and medicine cool. And, with the flip of a switch, can keep hot items warm.

Before you use your new fridge, please take a moment to read all about it, including important safety information.

Sincerely,

The Iceman™ Team



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 4** Safety Instructions
- 8** Features
- 9** Operating Instructions
- 10** Cleaning and Maintenance
- 11** Storage
- 12** Terms and Conditions
- 14** Warranty Registration

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against electrical shock, do not immerse cord or plugs in water or other liquid.
3. Close supervision is necessary when this appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool prior to cleaning the product.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Should this occur, please contact Chefman® Customer Support for examination, repair, or adjustment.
6. Do not let cord hang over edge of table or counter or touch hot surfaces.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

7. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
9. Do not use appliance for other than intended use.
10. When alternating between Hot and Cold functions, turn the switch to OFF first. After 2 minutes, turn the switch from COLD to HOT.
11. When using in a car, disconnect the plug from the outlet when not in use or the car is not running.
12. Allow adequate ventilation on all sides of the unit when in operation. Keep the fan free of obstructions.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electric shock.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

POWER CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Never use the product if the power cord shows signs of abrasion or excessive wear. Contact Chefman® Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

*California Proposition 65:
(Applicable for California Residents only)*




WARNING:

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.



Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.

FEATURES

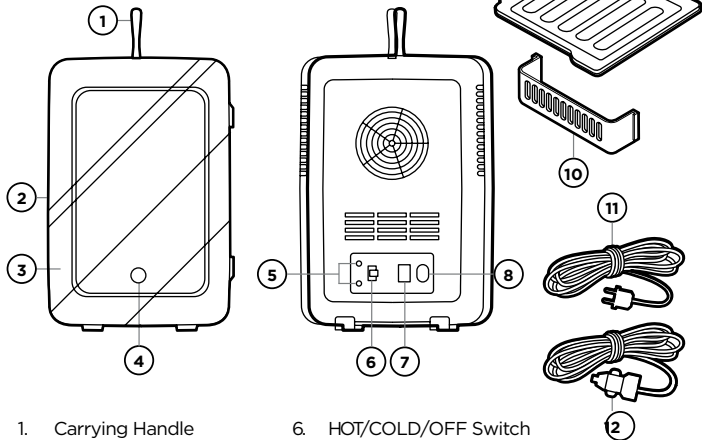

1. Carrying Handle
2. Discreet Door Handle
3. Mirrored Door with LED Lights
4. LED Light Switch
5. Red and Green Indicator Lights
6. HOT/COLD/OFF Switch
7. DC Plug Outlet
8. AC Plug Outlet
9. Removable Shelf
10. Removable Door Shelf
11. AC Cord and Plug
12. DC Cord and Plug

OPERATING INSTRUCTIONS

- When using your mini fridge in a car, you can plug it into the 12V power outlet. When using it at home or at the office, you can plug it into a wall outlet.
- Before using, first connect the plug of the cord into the socket of the personal mini fridge, then connect the other end to the power outlet.
- Once plugged in, you can choose either the warm or cold function. Turn the switch to COLD for cooling mode; the green LED light will illuminate. Or turn the switch to HOT for warming mode; the red LED light will illuminate.
- When the switch is turned to OFF, the personal mini fridge will function as an insulated box.
- For best results when cooling or heating items, refrigerate items before placing in personal mini fridge on cooling mode, or heat items before putting in warming mode.
- To turn on LED lights, press the button on the front of the fridge.
- With the interior shelf in place, the fridge can hold four 12-ounce cans; to accommodate six, simply remove the shelf.

CLEANING AND MAINTENANCE

- Wipe the outside of the mini fridge with a clean cloth.
- Wash shelves with warm soapy water and dry thoroughly. (Shelves are NOT dishwasher safe.)
- Do not immerse mini fridge or power cords in water.
- **IMPORTANT:** In the COLD operation mode, the unit may develop frost that can lead to liquid condensation when switched OFF or to HOT. This is normal. Periodically wipe the interior surfaces with a dry cloth to ensure clean and dry operating conditions.

STORAGE

- Store the appliance in a cool, dry, clean place, out of reach of children and pets.
- Keep the packaging in order to transport the appliance or store the appliance when not in use.

TERMS AND CONDITIONS

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.

TERMS AND CONDITIONS

Limited Warranty

WHAT THE WARRANTY COVERS


- **Manufacturer Defects** - Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

THIS WARRANTY DOES NOT COVER

- **Misuse** - Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;
- **Poor Maintenance** - General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;
- **Commercial Use** - Damage that occurs from commercial use;
- **Normal Wear and Tear** - Damage or degradation expected to occur due to normal use over time;
- **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;
- **Catastrophic Events** - Damage that occurs from fire, floods, or natural disasters; or
- **Loss of Interest** - Claims of loss of interest or enjoyment.

CHEFMAN® WARRANTY REGISTRATION

What do I need to register my product?

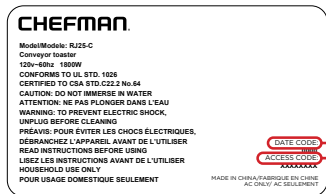

- Contact Information
- Model Number
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code
- Access Code

NOTE: Label depicted here is an example.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

1. Visit Chefman.com/register.
2. Scan the QR code to access site:



CHEFMAN® WARRANTY REGISTRATION

For product information

Please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

Chefman® is a registered trademark of RJ BRANDS, LLC.
Cooking Forward™ is a trademark of RJ BRANDS, LLC.
Iceman™ is a trademark of RJ Brands, LLC.



@mychefman



www.chefman.com/iceman

ICEMAN™ designed by ©CHEFMAN 2023